

A

Diagram A shows the preparation of the control gear. A hand is shown turning a switch to the "OFF" position. The components listed are: 1x oval control gear, 1x metal mounting bar, 1x remote control, 2x screws, 2x screws, a Ø6mm drill bit, and two screwdrivers. The text "Nicht enthalten (Not included)" is present. On the right, three wiring diagrams illustrate correct and incorrect connections for Neutral (N) and Line (L) wires. The top diagram shows correct connections. The middle diagram shows a correct connection with the label "OK". The bottom two diagrams show incorrect connections with a large 'X' over them.

B

Diagram B illustrates the installation steps for the control gear. Step 1 shows the control gear being positioned against the ceiling. Step 2 shows the metal bar being attached to the ceiling. Step 3 shows the control gear being secured to the bar. Step 4 is a detailed view of the control gear being attached to the bar, with labels a, b, c, d, and e indicating the parts and actions. Step 5 shows the control gear being secured to the bar. Step 6 shows the control gear being secured to the bar. A circular inset shows the maximum length of the wires, labeled "Max. 6cm".

C

Diagram C shows the control gear being turned to the "ON" position. A hand is shown turning a switch to the "ON" position.

Icons for LED, CONTROL GEAR, and a lamp are shown.