



# INSTRUCTIONS INSTRUCCIONES

93874A / 93875A - BAYA1


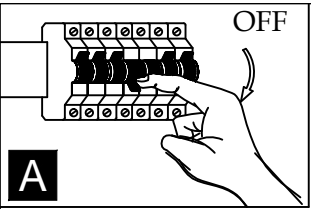


**A**

**B**

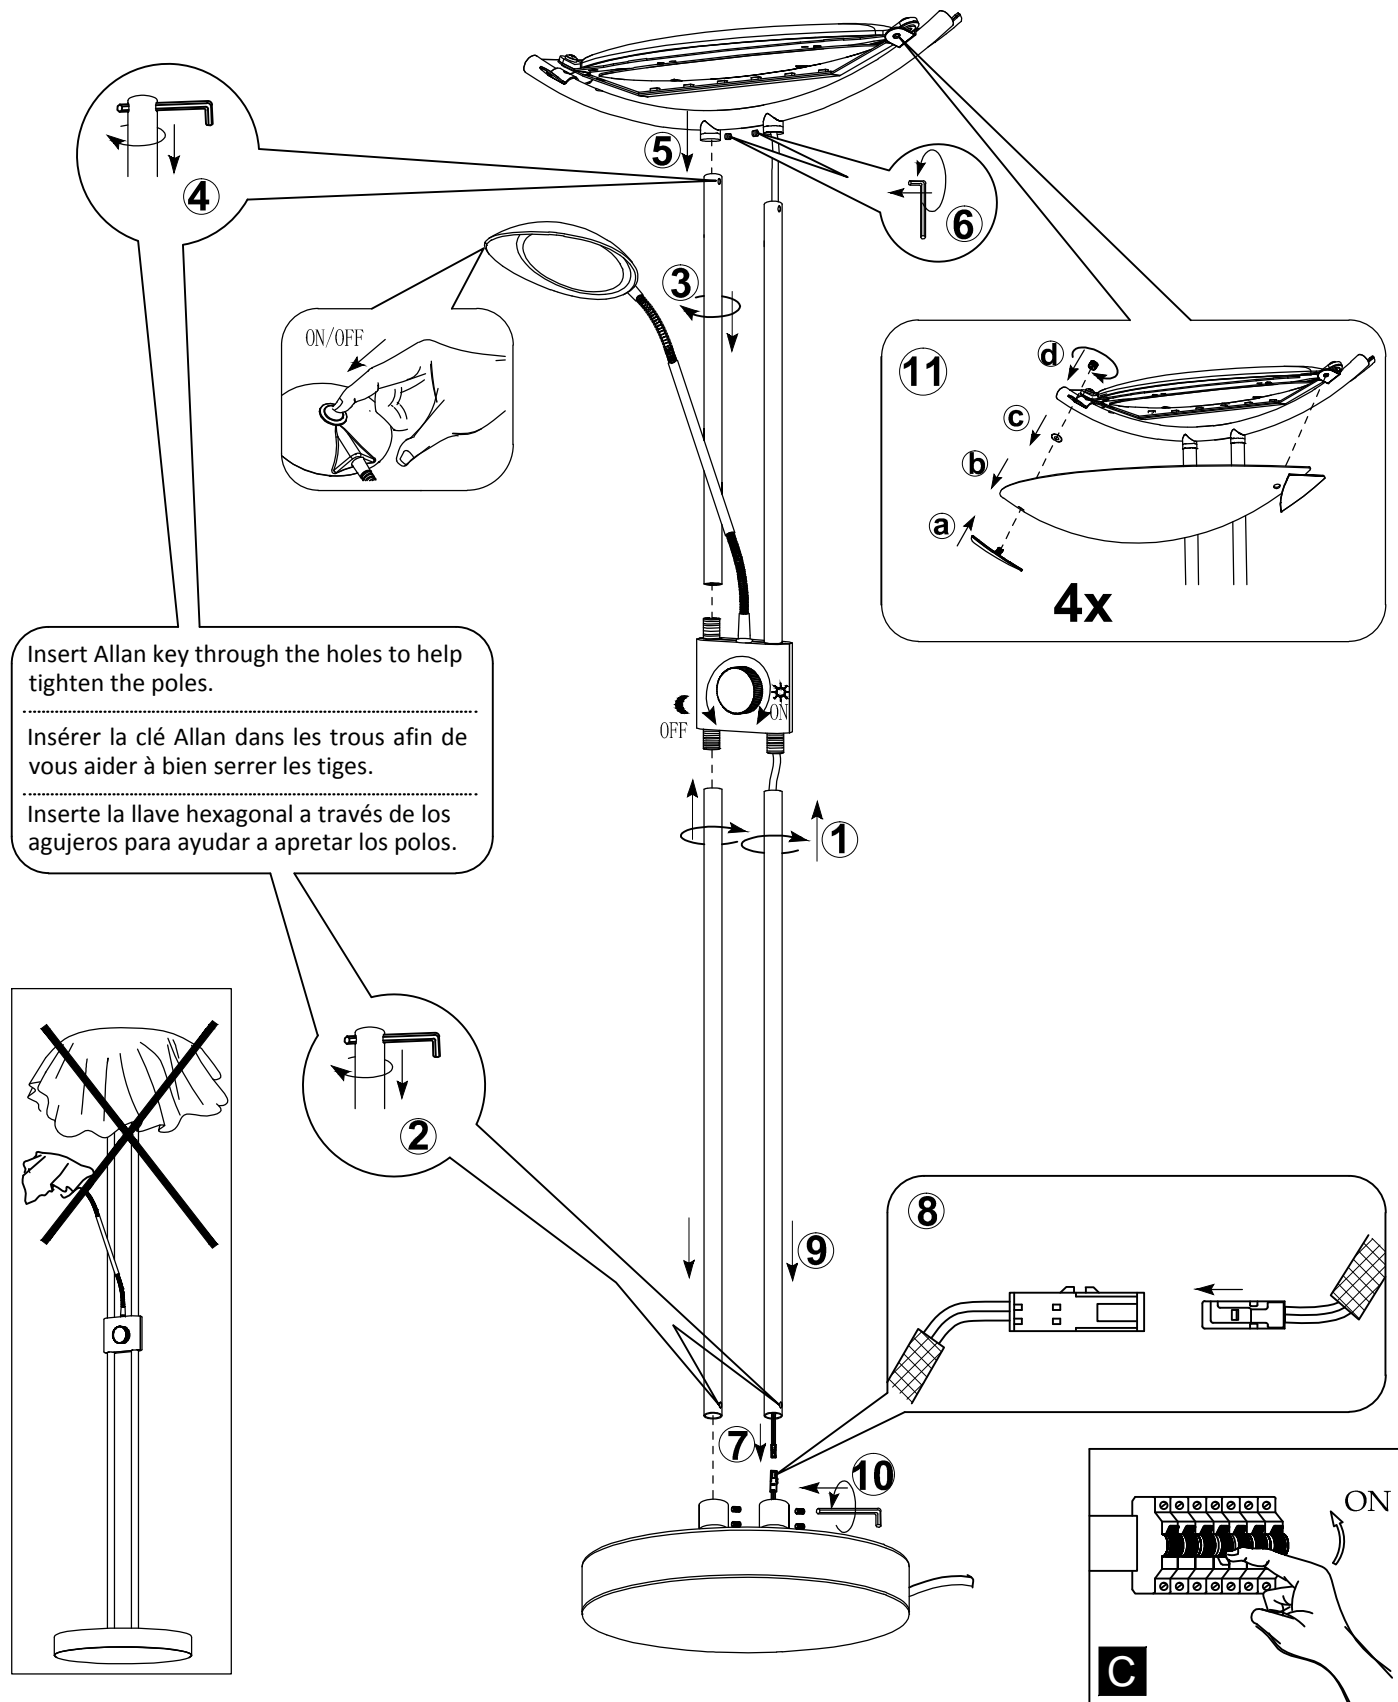

Insert Allen key through the holes to help tighten the poles.  
Insérer la clé Allan dans les trous afin de vous aider à bien serrer les tiges.  
Inserte la llave hexagonal a través de los agujeros para ayudar a apretar los polos.

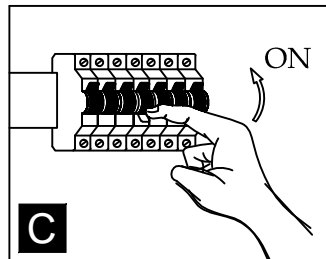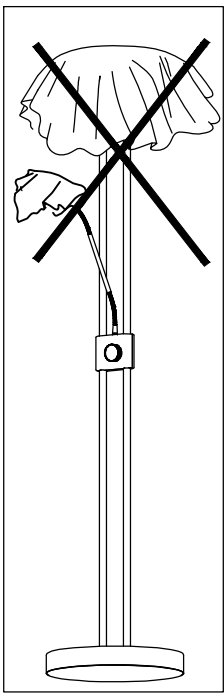

**C**