



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local council for more information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water and get into the food chain, damaging your health and well-being.

EGLO Lighting has a policy of continual product improvement and development, dimensions, hardware and designs may change to reflect this policy. EGLO reserves the right to discontinue or change product specifications & designs at any time without notice and without incurring obligations. The images including all features and specifications in this manual are for illustrative purposes only. Product details, images & line drawings may vary depending on specific product models.

CONTENT

FOR YOUR SAFETY:	4
BEFORE INSTALLATION:	4
INSTALLATION:	5
WIRING CONNECTIONS:.....	6
OPERATING YOUR REMOTE CONTROL:	6
SETTING UP SMART CONTROL:	7
NETWORK & ROUTER SETTINGS:	7
DOWNLOAD THE MY CONTROL APP:	7
CONFIGURE YOUR IN-APP HOME:	7
CONNECTING MY CONTROL DEVICES:	7
OPERATING LIGHT FUNCTIONS:	8
OPERATING FAN FUNCTIONS:	8
TROUBLE SHOOTING:.....	9
WARRANTY CLAIMS ON INSTALLED PRODUCTS:.....	10
1. AUSTRALIAN CONSUMER LAW:.....	10
2. LIMITED REPAIR / REPLACEMENT WARRANTY:	10
4. WARRANTY TRANSFER:	10
5. WHAT IS NOT COVERED:	11
6. COMMERCIAL USE:	11
WARRANTY CONDITIONS:.....	11
HOW TO MAKE A WARRANTY CLAIM:	11

Thank you for purchasing your new **EGLO smart remote control**.
To ensure a safe and successful installation, please make sure to read this manual, ensure it is on hand for your installer to refer to, and keep in a safe place for future reference.

FOR YOUR SAFETY:

1. Please read this manual carefully and save it for later use.
2. ALL electrical work should only be carried out by a suitably qualified and licenced electrical contractor. This remote control must be installed ONLY by a suitably qualified and licenced electrical contractor.
3. This device is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
4. Do NOT allow children to play with this device and supervise children around electrical devices at all times.
5. Before commencing any electrical work, ensure the power is disconnected and/or the mains switched off at the circuit box and ensure all pole isolation of the power supply.
6. Do not install the remote control together with an existing wall controller. Replace existing wall controller with a double pole wall switch to power/isolate the remote control.
7. The remote controller must not share a wiring circuit with any electrical equipment that is sensitive to voltage fluctuation, such as security lighting with infrared sensors.
8. Do not use a solid-state dimmer with this ceiling fan remote.
9. All EGLO products are warranted to be free from defects in workmanship and materials provided the products are used with a voltage supply within the range the product is designed to operate.
10. This remote control is designed for use indoors only. Do not install in damp locations.
11. Do not exceed the rated power input specifications.
12. Do not pull or cut any wires.
13. Do not drop or bump the remote control transmitter or receiver.
14. Batteries must be replaced regularly.
15. This remote control is only suitable for controlling a ceiling fan motor and light kit connected to a ceiling fan, any other use would be considered misuse.
16. This remote control is only suitable where the receiver can be safely and securely inserted into the hanger bracket.
17. EGLO lighting will not be liable for any advice given to the consumer from any 3rd parties including suppliers, retailers & electricians.
18. The important safeguards and instructions in this manual are not designed to cover every possible condition or circumstance. It is understood that common sense, caution, and care are factors that cannot be built into the product, those using and maintaining this product must supply these factors.

BEFORE INSTALLATION:

This remote controller has been designed to control your ceiling fan speed and light. There are 4 speeds, Fan ON/OFF, Light ON/OFF, Light Step Dimming and Timer functions, which will allow the flexibility to control your fan, your way.

Your EGLO remote control requires 2 x AAA batteries (included) to operate. Ensure only quality batteries are used and replace batteries regularly.

Specifications

Model:	205847
Input:	220-240V, 50/60Hz
Rating:	Fan: 100W (min. 10W), Light: 300W (min. 5W)
Frequency:	433.92MHz
Weight:	220g

INSTALLATION:

IMPORTANT: Check that the power is disconnected, and/or the mains switched off at the circuit box to ensure all pole isolation of the power supply.

WARNING: For safe use of the connected fan, an all-pole disconnection **MUST** be incorporated into the fixed wiring in accordance with the wiring rules, as outlined in clause 7.12.2 of AS/NZS 60335-1 for meeting the minimum electrical safety of this standard. Please note warranty will be void if the installation is without a means for an all-pole disconnection incorporated in the fixed wiring in accordance with the wiring rules.

A single pole isolation switch must be also placed in the same room as the fan as per local wiring regulations AS/NZS 3000, in accordance with clause 2.3.2.2.1& 4.13.1.3 of AS/NZS 3000.

Note: If there are two or more ceiling fans installed in the one location/room, an isolation switch is required for EACH ceiling fan. This is required when programming any remote-control transmitter & receiver to pair together, and for fan servicing.

Fig. 1

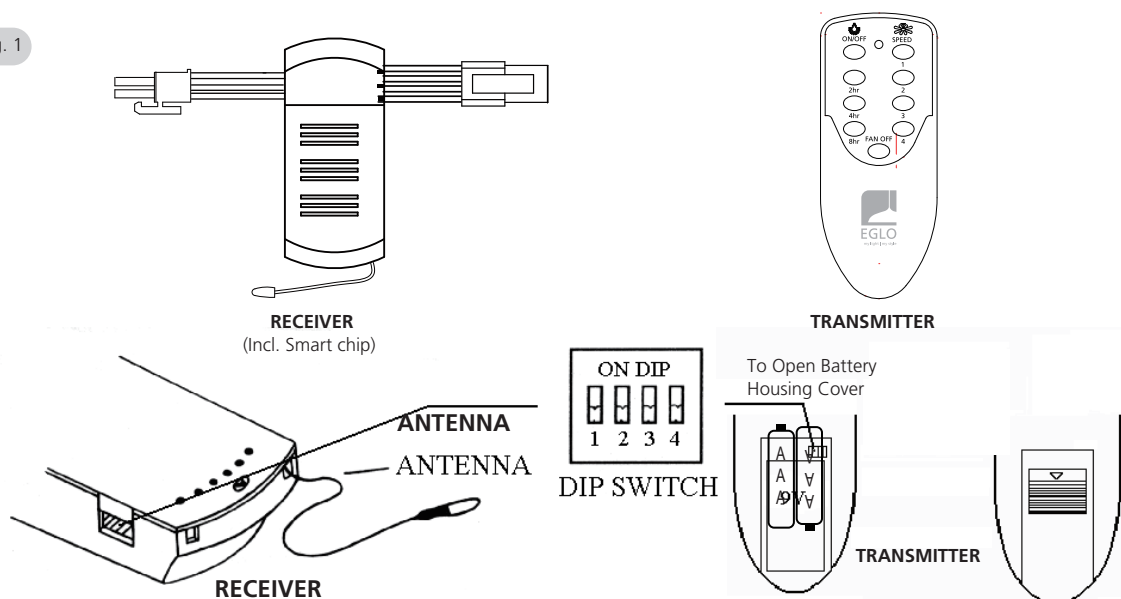


Fig. 2

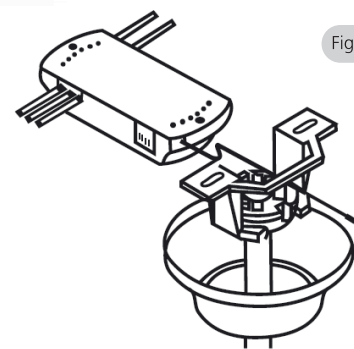


Fig. 3


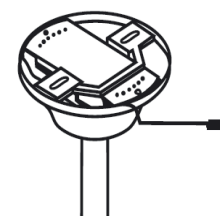


Fig. 4

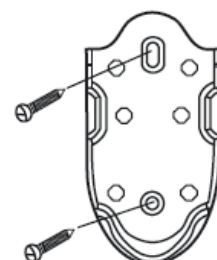


1. The remote transmitter and receiver must be configured so that the receiver and transmitter are paired together to allow communication. Set the DIP switches on **BOTH** the transmitter and receiver to be **ON THE SAME SETTING**. The DIP switches are located in the battery compartment of the transmitter, and on the side of the receiver.
2. For each fan, set the transmitter's code and then set the same code on the receiver, and double check they are the same. Every ceiling fan must be operating from its own unique code.
3. Remove the battery cover from the back of the remote transmitter and insert 2 x AAA batteries (included), ensuring the polarities are correct as shown in the battery compartment, and that the batteries are fresh batteries.
4. Lower the ceiling fan canopy from the ceiling and disconnect the wiring by unplugging the plug connectors. remove your exiting remote receiver.
5. Connect the new remote receiver plug connectors to mains supply, and to fan/light.
6. Starting with the black antenna, slide the receiver into the hanger bracket.(Refer Fig 2)
7. Reattach the ceiling fan canopy, ensuring the antenna is not damaged, and located where it will receive the signal from the transmitter. (Refer Fig 3)
8. Test the operation.
9. Install the transmitter wall holder using the screws provided, taking care not to damage cables located within the wall cavity. (Refer Fig 4)


WIRING CONNECTIONS:

WARNING:
FOR YOUR SAFETY ALL ELECTRICAL CONNECTIONS MUST ONLY BE UNDERTAKEN BY A QUALIFIED AND LICENSED ELECTRICIAN.

Note: For safe use of the connected fan, and all-pole disconnection **MUST** be incorporated into the fixed wiring in accordance with the wiring rules, as outlined in clause 7.12.2 of AS/NZS 60335-1 for meeting the minimum electrical safety of this standard. A single-pole switch also must be placed in the same room as the fan as per local wiring regulations AS3000.

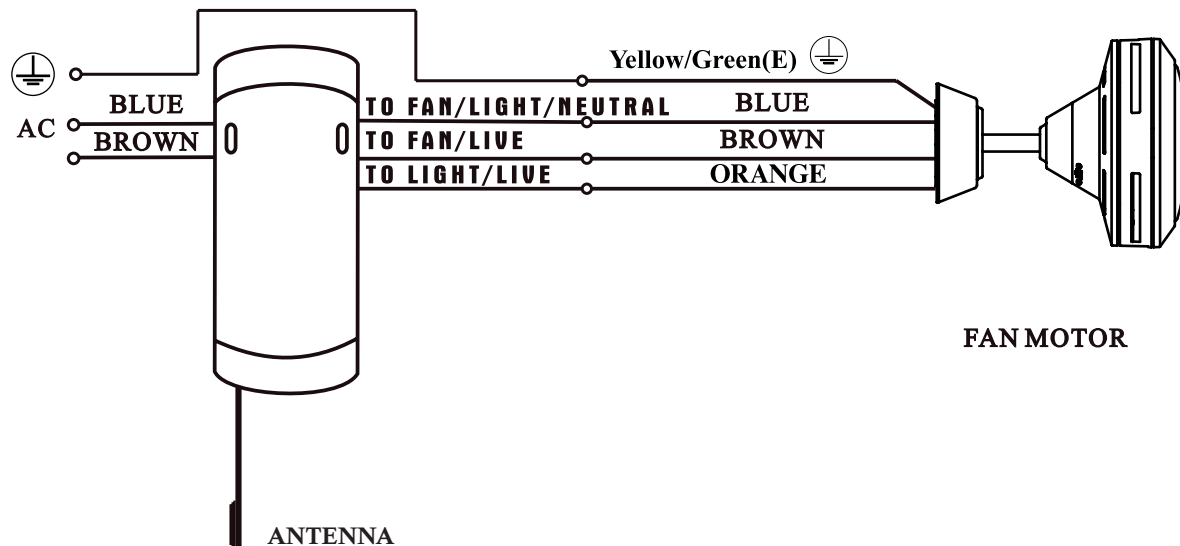

OPERATING YOUR REMOTE CONTROL:

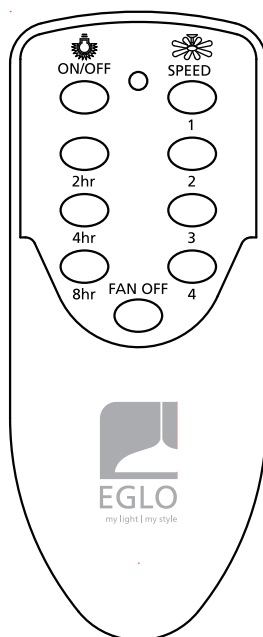

FAN OFF: Turn ceiling fan off.

4. Turn ceiling fan on at high speed.
3. Turn ceiling fan on at speed 3.
2. Turn ceiling fan on at speed 2.
1. Turn ceiling fan on at low speed.



ON/OFF: Press and release to turn light on or off.
 Press off/on again within 3 seconds for dim to 50%
 Press off/on again within 3 seconds for dim to 25%
 Press off/on again within 3 seconds to return to 100%
 Press off exceed 3 seconds and turn on, light return to 100%

2hr: Ceiling fan and Light will turn off in 2 hours.

4hr: Ceiling fan and Light will turn off in 4 hours.

8hr: Ceiling fan and Light will turn off in 8 hours.

SETTING UP SMART CONTROL



Conveniently control your EGLO BONDI ceiling fans using your smart devices. Whether you are at home and simply don't want to get off the couch, or on the opposite side of the world, you can operate your ceiling fan easily via your smart device, as well as the remote control.

NETWORK AND ROUTER SETTING:

Ensure you have a WiFi network, name and password that operates at 2.4Ghz to be compatible with my control products. Your IOS/Android device will need to be connected to this network when pairing or controlling your My Control device. A minimum WiFi strength of 2 bars is necessary to connect and control your device.

DOWNLOAD THE MY CONTROL APP:


1. Download the EGLO mycontrol App from App Store or Google Play or scan the QR code.
2. Sign up to "create a new account".
3. Follow the in-app prompts to complete the set up.



CONFIGURING YOUR 'IN-APP' HOME:

(Creating a home enables the user to assign, allocate, and share the devices easily)





Upon installation of the EGLO mycontrol App, tap "Me" located at the bottom right of the screen and select "Home Management", then "Create your home". Follow the prompts to complete your selections and tap "Save". Refer Fig 5

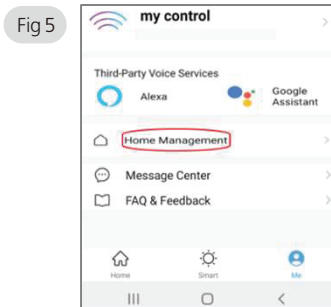

CONNECTING MY CONTROL DEVICES:

Follow the table and steps below to pair your devices.

1. Press and hold the "8H" button on your remote control for 2 to 3 seconds or until you hear a "beep" sound.
2. Open the App to the "Home" screen.
3. If your device have been discovered, go to step 6.
4. From the App "Home" screen, tap "+" or Add Device". Refer Fig 6
5. Select category "Small Home Appliances" > Fan (BLE+WiFi), and tap "Add" when your device appears, and follow the prompts. Refer Fig 7.
6. Enter your 2.4GHz Wifi network name and Password (previously set up) and tap "Next". Refer Fig 8.
7. Follow the prompt to complete the pairing process.
8. Once your device is successfully added, you can "re-name" it and assign it to a room. Refer Fig 9.

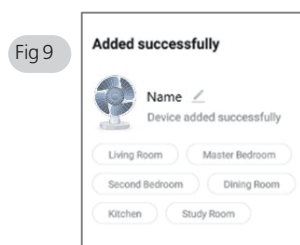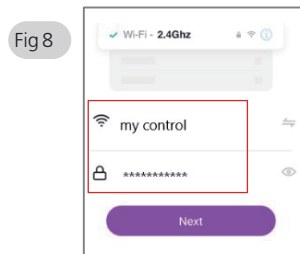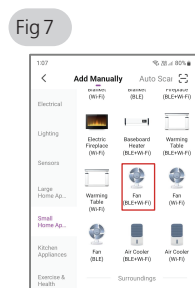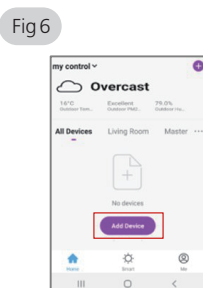

SETTING UP SMART REMOTE CONTROL

OPERATING LIGHT FUNCTIONS: Refer Fig 10

- Lamp Switch: Turns light On / Off
- Brightness: Press Lamp Switch off/on again within 3 seconds for dim to 50%
Press Lamp Switch off/on again within 3 seconds for dim to 25%
Press Lamp Switch off/on again within 3 seconds to return to 100%
Press off exceed 3 seconds and turn on, light return to 100%

LED Colour: **Refer BONDI fan manual.**

Countdown Off: (Light Timer) Set desired period until light turns off

Fig 10


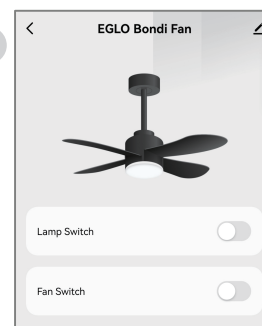


Fig 11

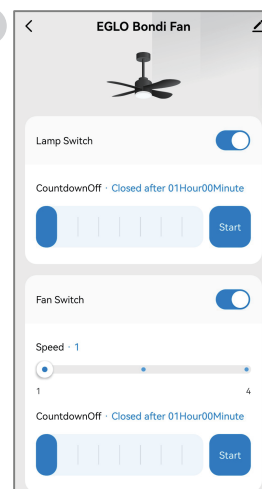

OPERATING FAN FUNCTIONS: Refer Fig 11

- Fan Switch: Turns fan On / Off
- Fan speed: '1' = Speed 1
'2' = Speed 2
'3' = Speed 3
'4' = Speed 4

Fan Direction: **Refer BONDI fan manual, fan direction switch located on fan.**

Natural Breeze: **Natural Breeze function not available on BONDI ceiling fans.**

Countdown Off: (Fan Timer) Set desired period until fan turns off

TROUBLE SHOOTING:

**WARNING:
FAN MUST BE SWITCHED OFF AND ISOLATED BEFORE COMMENCING ANY TROUBLE SHOOTING**

PROBLEM	POSSIBLE CAUSE	POSSIBLE REMEDY
No functions operate	Main power not restored.	(*) Replace fuse. Turn ON circuit breaker. Turn ON wall switch.
	Wall controller is not removed and interferes with remote operation.	(*) Remove the fan wall controller and replace with ON/OFF switch for remote.
	Wall switch-power to the fan remote is OFF.	Switch wall switch ON, to power the remote.
	Receiver wiring incorrect.	(*) Verify wiring connections according to label and wiring diagram.
	Transmitter and receiver DIP switches do not match.	Set transmitter and receiver to same DIP switch setting.
	The remote is too far from the receiver	Move closer to receiver.
Smart control not working	Issue with mycontrol app	Refer to the in-App help section of the mycontrol App to help guide you
Operates only at close range	Signal blocked from reaching receiver	Extend antenna out from canopy or move it for better reception.
	Battery too weak.	Replace with all new batteries. Do not mix up the old and new battery.
More than one fan remote operating. Interference in same area.	RF interference.	Change DIP switch settings to a different code. Each pair of transmitter and receiver must have unique DIP switch code.
Remote reset to default value	Batteries lost contact by accidental dropping of the remote, or battery is weak	Reset the setting as you preferred manually, after re-fitting batteries or change of new batteries.

(*) May require the assistance of a qualified and licenced electrical contractor.

WARRANTY CLAIMS ON INSTALLED PRODUCTS:

EGLO Lighting (EGLO) will not be liable for charges incurred by the consumer for rectification, de-installation or re-installation unless approved by EGLO management in writing prior to commencing work.

All claims are to be submitted to EGLO Warranty Department with a copy of the original purchase receipt, copy of receipt from installation (inc electrical contractor licence number), and completed EGLO warranty claims form. Incomplete submission will result in delays processing your claim.

Any additional photos, videos or information that can be supplied at the time of submission, will help expedite your claim.

1. AUSTRALIAN CONSUMER LAW:

The benefits given to you the consumer in this warranty document are in addition to your other rights and remedies under a law in relation to the products to which this warranty document relates.

“YOUR CONSUMER RIGHTS”: “Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.”

Subject to “Your Consumer Rights” outlined above, but otherwise to the maximum extent permitted by law, EGLO will not be liable for any consequential or indirect loss or damage suffered or incurred by you in relation to an EGLO product, including but not limited to loss of use, loss or damage for business interruption, or profits.

2. LIMITED REPAIR / REPLACEMENT WARRANTY:

EGLO offers the purchaser a repair or replacement of the EGLO product in cases where the product fails due to defective materials or workmanship, when installed and operated under normal domestic conditions, for a period of 1 year. Please refer to the warranty period listed on each product to determine the warranty period which EGLO grants to the original purchaser of the EGLO product. The warranty period begins from the date of purchase. Also, please refer to WHAT IS NOT COVERED.

You must provide proof of purchase (such as the original dated purchase receipt/invoice) from an authorised EGLO reseller to make a warranty claim. You must also provide a receipt from installation, including the electrical contractors licence number - if an electrical licence number cannot be supplied, your claim will be denied. This warranty will not apply if the ceiling fan is installed by anyone other than a qualified and licensed electrical contractor.

Resetting/Changing of DIP switches in connected remote controls is not covered by warranty and a service call fee WILL apply.

Batteries (if supplied), are done so as a complimentary (free) item only, and are not covered by warranty.

REPAIRS / REPLACEMENTS

EGLO products presented for repair may be replaced by refurbished goods of the same type rather than being repaired at the discretion of EGLO. Refurbished parts may be used to repair the goods to proper order.

BALANCE OF WARRANTY

To the maximum extent permitted by law, any product replaced, repaired or refurbished by EGLO is covered only by the balance of the warranty period remaining from the date of original purchase of the original EGLO product.

4. WARRANTY TRANSFER:

If the ownership changes on the dwelling/premises where the EGLO product is installed, the balance of the warranty period passes to the new owner provided the original proof of purchase (such as the original dated purchase receipt) from an authorised EGLO retailer is retained by the new owner. In addition, proof of installation & licence number of the original installing electrician must be retained.

5. WHAT IS NOT COVERED:

Subject to “Your Consumer Rights”, but otherwise to the maximum extent permitted by law, the EGLO warranties provided in this document will not cover the following:

1. EGLO products that are not purchased from an authorised dealer in Australia and installed in Australia.
2. Where installation was not carried out by a qualified and licensed electrical contractor or where a valid Electrical Safety Certificate cannot be presented.
3. EGLO products not installed in accordance with the product’s installation instructions for use and/or specifications.
4. EGLO products not operated in accordance with the instructions for use, or specifications.
5. EGLO products that have been modified in any manner.
6. Defect, damage, or failure to a EGLO product resulting from misuse, accident, neglect, abuse, tampering, modifications or unauthorised repairs of any kind by any person.
7. Damages not caused by a fault in the EGLO product materials or workmanship.
8. Defect, damage, or failure to an EGLO product resulting from any acts of God, including damage from lightning, power grid fluctuations, or power surges.
9. Replacement of batteries supplied with certain products.
10. Damage caused by alternative power systems. (for example: ‘off grid’ etc.)

6. COMMERCIAL USE:

EGLO products which are specifically designed for commercial use are designated as Commercial Use Products on the product packaging. All other EGLO products are designed for domestic use only.

This product is not designed or intended for industrial or commercial use.

WARRANTY CONDITIONS:

- This warranty is for 240V 50Hz products originally purchased in, and installed in Australia ONLY.
- Installation must be performed by a qualified and licensed electrician. The warranty will not apply if the product is installed by other than a qualified and licensed electrician.
- Problems arising from incorrect installation are not covered by warranty.
- The cost of repairs and/or service call arising from incorrect installation, not due to faulty material or workmanship in accordance with the EGLO warranty, will be payable by the purchaser.
- This warranty is only valid for appliances used according to the manufacturer’s instructions.
- This warranty is only valid for remote controls connected/paired to EGLO AC ceiling fans.
- The manufacturer does not accept liability for any direct or consequential damage, loss or other expense arising from misuse or incorrect installation and operation of the appliance.
- Warranty will only be provided where proof of qualified electrical installation is provided. E.g. Electrical Safety Certificate.
- Warranty will not be provided if installation is without an all-pole disconnection incorporated in the fixed wiring in accordance with the wiring rules.

HOW TO MAKE A WARRANTY CLAIM:

Please return the faulty EGLO product together with a copy of the proof of purchase, and if required, a certificate of compliance for the installation of the product by the licensed electrician who installed the product, to the authorised EGLO retailer where the product was purchased. To the maximum extent permitted by law, the customer must bear the costs and expenses of claiming under this warranty, including but not limited to the cost incurred in freight, postage, handling, travel, dismantling or reinstalling the product.

IN THE CASE OF MISSING ACCESSORIES OR PARTS, PLEASE CONTACT EGLO CUSTOMER SERVICE BEFORE COMMENCING INSTALLATION OF THE PRODUCT. IF YOUR PRODUCT IS DEFECTIVE OR EXCESSIVELY NOISY, PLEASE FIRST REFER TO THE TROUBLE SHOOTING SECTION OF THIS MANUAL AND PERFORM ALL CHECKS, AND THEN CONTACT EGLO CUSTOMER SERVICE BEFORE THE ELECTRICIAN LEAVES THE RESIDENCE WHERE THE INSTALLATION IS TAKING PLACE.



WARRANTY CLAIM FORM

Warranty Claim No.: (EGLO Office Use Only)	
------------------------------------------------------	--

To help us assist you with your claim, please complete the enclosed warranty form in full.

CUSTOMER DETAILS	
Name:	
Day me Phone/Mobile:	
Email:	

ADDRESS WHERE PRODUCT IS INSTALLED			
Address:			
Suburb/Town:	State:	Postcode:	

STORE PURCHASED FROM	
Store Name:	
Date of Purchase:	

INSTALLATION DETAILS			
Electrician Business Name:			
Electrician Name:	Electrician Licence No.:		
Installation Date:	Electrician Phone/Mobile:		
Electrician Email:			

PRODUCT DETAILS			
Series Name:			Model Number:
Remote Control Accessory:	Yes <input type="checkbox"/>	No <input type="checkbox"/>	Remote Model No.:
DC Wall Control Accessory:	Yes <input type="checkbox"/>	No <input type="checkbox"/>	DC Wall Control Model No.:
Fault Details:			

CHECKLIST - Have you supplied?

- Receipt of purchase: Yes No
- Receipt of installation/electrical safety certificate: Yes No
- photos / videos that may help fast track claim: Yes No

I confirm that I have an isolation switch installed for EACH of the ceiling fan(s) associated with this Warranty Claim. I understand that my claim cannot be processed if an isolation switch is not installed.

<p>Please email this form, together with copy of your purchase receipt & electricians' invoice to: EGLO LIGHTING AUSTRALIA warranty@eglolighting.com.au For assistance with your claim please phone: 1800 254 448</p>



EGLO LIGHTING AUSTRALIA

5/339 Archerfield Road
Richlands
Queensland 4077
www.eglo.com.au